



Universal Presser Foot Holder




1

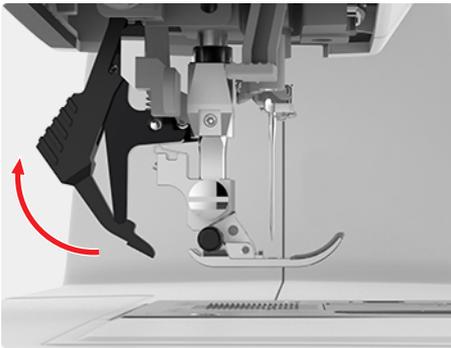

2

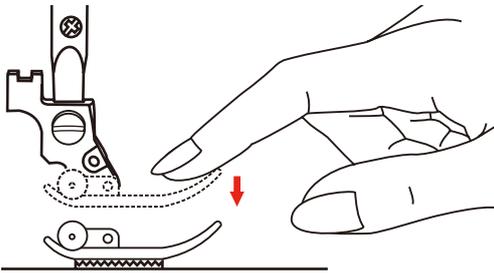

3

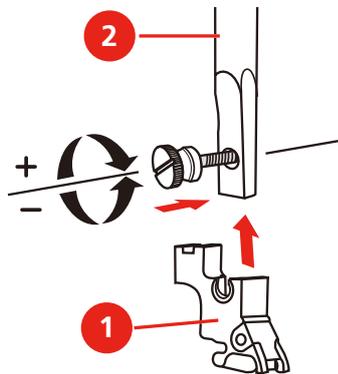

Information

Purpose

- To secure a multitude of application-oriented presser feet for general and decorative hemming and top stitch work.

For Your Safety

Before using this accessory, please read this instruction manual as well as the instruction manual of your machine carefully.

Application

Installing the Presser Foot Holder

- > Raise the needle.
- > Raise the presser foot.
- > Deactivate the dual feed. (Fig. 1)
- > Switch the machine off and disconnect it from the power supply system.
- > Remove the presser foot. (Fig. 2)
- > Undo the screw with the screwdriver and remove the presser foot holder.
- > Press the universal presser foot holder (1) onto the needle bar (2) from below, and secure with the screw. (Fig. 3)
- > Attaching the Desired Presser Foot Sole